GB Fitting Instructions for Basic Carrier

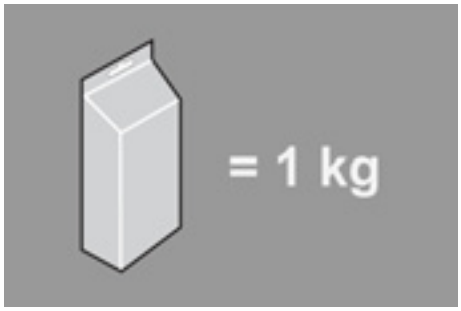

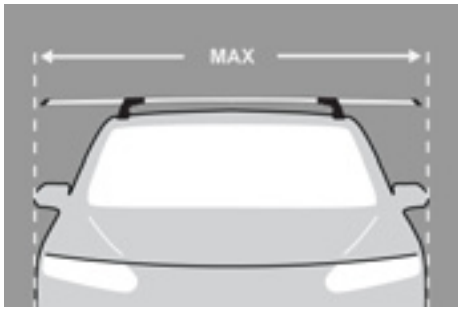

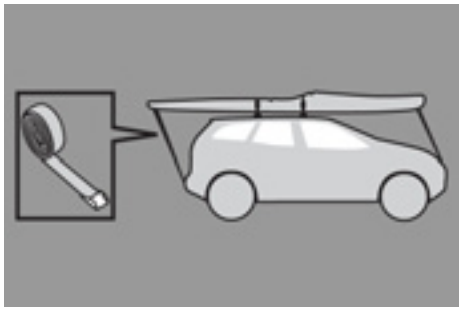

x 8

x 4

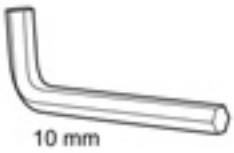

x 1

x 4

x 4

x 4

x 4

x 4

x 4

x 4

x 4

First Time Installation

- Remove parts from packaging and check contents. Contact your Prorack dealer if parts are missing or damaged.

- This kit fits type A and B only.
- These instructions show type A crossbar fitted. They also apply to type B.

- Use keys to remove covers.

- Use hex screwdriver to reverse adjusting screw 10 turns.

- Remove clamp block by pressing backwards.

- Remove both pins from each leg (use spanner located inside left hand cover to assist).

- Assemble metal loadplate and rubber pad from the fitting kit.
- Repeat for all four items.

- Detach foot from leg. Store loose parts in a safe place.
- Repeat for all legs.

- Assemble metal loadplate into leg. Ensure loadplate interlocks with the leg.

- Using short capscrew and washer, secure assembly onto leg (use Hex Screwdriver supplied with crossbar to assist)
- Repeat for all legs.

- Pull rubber pad back slightly and insert location peg into the rear position on the metal loadplate. Peg will click into place.

- Place crossbar on vehicle. Minimum recommended spacing between the bars is 700mm (unless otherwise stated).
- Crossbar can be positioned anywhere along the roof rail.
- Make sure there is no interference between what you intend to carry with aerials, sunroof or tailgate.

- Ensure location peg engages the inner side of the rails.
- Adjust crossbar in or out to suit vehicle. Refer to the crossbar instructions for crossbar adjustment.
- Ensure that the crossbar is adjusted evenly at both ends.

- Tighten adjusting screw to 5 Nm.

- Temporarily mark with masking tape or pencil the position of crossbars on the rail.

- Remove crossbar off vehicle and turn upside down. Select metal clamp and fit small tongue into position 2 marked on the leg.

- Swing clamp towards metal loadplate and check clamp tongue is engaged into position.

- Select coach bolt and insert through metal clamp slot.

- While holding clamp and coach bolt, turn crossbar over to upright position and loosely assemble red plastic knob to the coach bolt. Do not start to tighten.
- Repeat for all legs.

Fitment

- Place crossbars back onto vehicle roof by placing one end of crossbar on the rail and swing the other into previously marked position.

- Ensure the clamp engages correctly on inside of roof rail.

- Tighten the red plastic knob. Large Allen key can be used to help tightening knob.
- Do not over tighten.
- Ensure plastic red knob is vertical when fully tightened.

- Check crossbar is securely attached to the vehicle.
- Use keys to fit and lock covers

Fitment to Subaru Legacy or Liberty Wagon Sep 03+ ONLY

- Open or remove fixed-point covers.

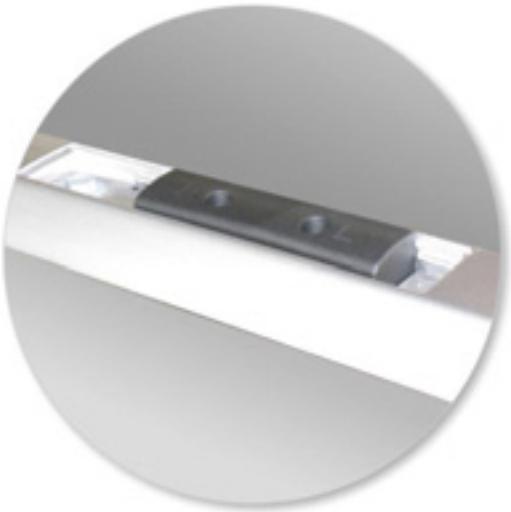

- Select plastic packer blocks from fitting kit and insert into fixed-points. Blocks have L & R which should be read from beside vehicle. "L" should point to your left and "R" should point to your right.

- Position crossbar so hole in centre of metal loadplate lines up through packer block with threaded insert in fixed-point. If standing on the right side of vehicle, use hole marked "R". If on the left use hole marked "L".
- Tighten adjusting screw to 5 Nm.

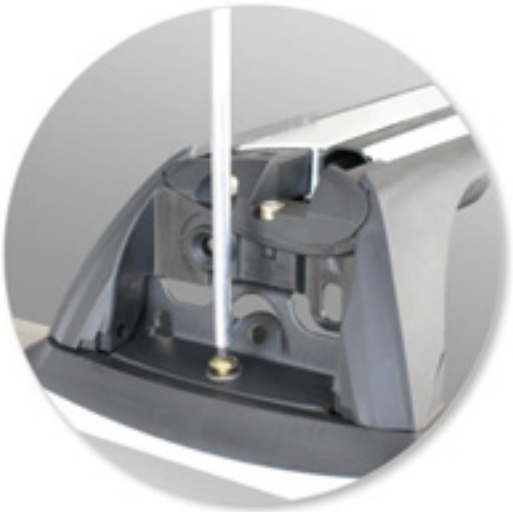

- When fitting type B crossbars, tighten using Allen Key located inside one of the right hand side covers to assist.
- Using long capscrew and washer, secure assembly onto leg (use Hex Screwdriver supplied with crossbar to assist).

- Check crossbar is securely attached to the vehicle.
- Use keys to fit and lock covers

CAUTION: Regularly check screws are tight